


Surround Deck Assembly Instructions


T4

- Parts List:
- 7 regular deck sections
 - 1 power pack section
 - 7 tall deck support legs
 - 5 short step support legs
 - 6 long deck section connectors
 - 6 short deck section connectors
 - 12 tall deck support leg braces
 - 2 end caps
- 1 bag of 2" screws and 1 bag of 2-1/2" screws
 A power drill with a Philips type bit is required
 Some pre-drilling may be required.

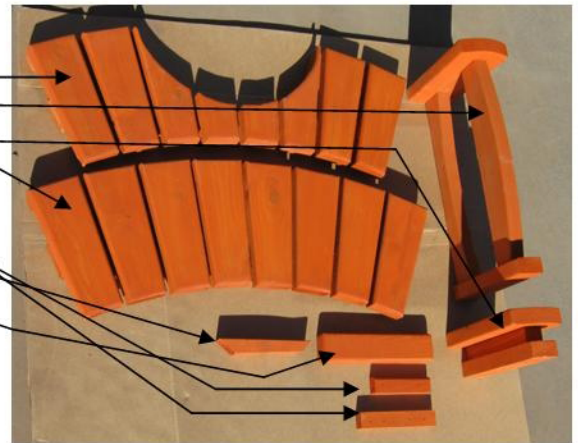


There are 3 main steps involved:

Step 1: Place 2 deck sections topside down on appropriate surface then while maintaining approximately 3/8" gap space between the deck sections attach 1 long and 1 short deck section connectors in the center between the deck sections to fasten the deck sections together.

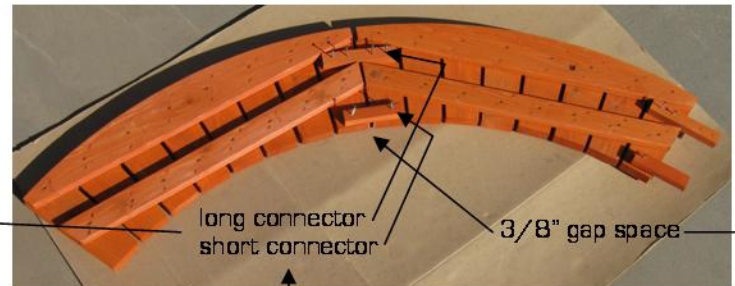

Important: The deck section connectors and the leg braces require the 2" screws. The tall legs and the short step legs and the end caps require the 2-1/2" screws.

Step 2: Attach the tall support legs in the center where the deck sections meet and on the ends then attach the leg braces. Attach end cap.

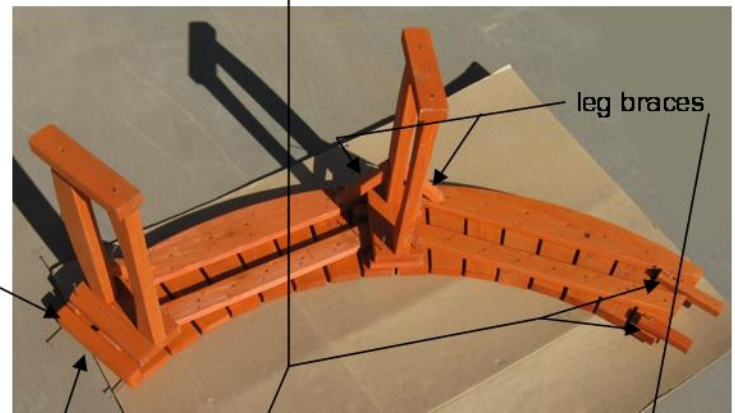


Remember to determine where the power pack section will be placed in relation to the assembly and layout of the surround.



2-1/2" screws for tall legs step legs and end caps

2" screws for leg braces and connectors

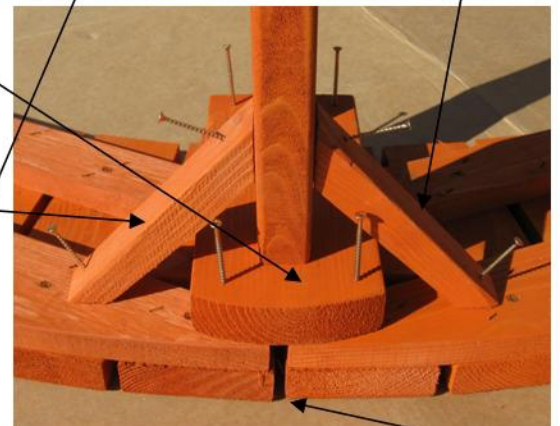

Step 3: entry step
 Attach short step support legs. 1 in the center where the deck sections meet. 1 in the center of each deck section and 1 on each end.

